StroboPLUS HDC™ Timer Screen
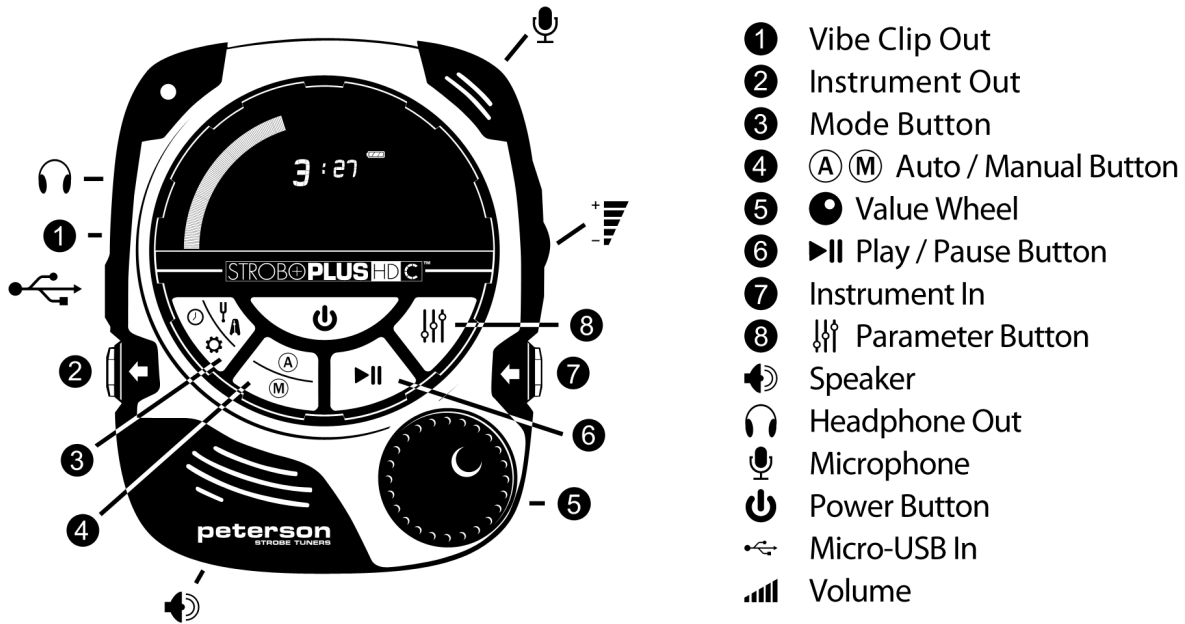
Congratulations on your purchase of the StroboPLUS HDC™. For instructions on general operation, please see the StroboPLUS HDC Quick Start Manual. For instructions and guidance on the StroboPLUS HDC Metronome, please see the StroboPLUS HDC Metronome Manual. Follow this link to learn about the StroboPLUS HDC Strobe Tuner mode, and this link to learn the details of the StroboPLUS HDC timer screen.

1. Vibe Clip Out
2. Instrument Out
3. Mode Button
4. (A) (M) Auto / Manual Button
5. ● Value Wheel
6. ▶II Play / Pause Button
7. Instrument In
8. ᚋᛁᚋ Parameter Button
   🔊 Speaker
   🎧 Headphone Out
   🎤 Microphone
   ⏻ Power Button
   ⇜ Micro-USB In
   ᵃˡˡ Volume

The StroboPLUS HDC Timer Screen has only one parameter, time, which is always active. When the display reads 0:00 The timer will count **up** in seconds when the start button is pressed. When the time is adjusted via the Value Wheel to any value *other* than 0:00, the timer will count **down**. A progress bar will illustrate the remaining time. Once set and started, the timer will operate in the background while other modes are being used. If counting down when the timer completes, StroboPLUS HDC will automatically switch back to the timer screen with a flashing 0:00. It is assumed that if the user sets the timer to count down, this interruption while using a different mode is welcomed. The maximum setting of the timer is 9:59:59. 9 hours, 59 minute and 59 seconds. The timer can be set back to 0:00 by pressing and holding the Value Wheel.

Turning the Value Wheel normally will adjust the timer by minutes. Pressing IN and turning the Value Wheel will adjust the timer by seconds. Pressing and holding the Parameter button and turning the Value Wheel will adjust the timer by hours.